

The seneye connect can only upload data to the servers from your PC whilst it is on. Therefore you will need to ensure that it does not auto shut down. This is done in the settings of your PC.

The "power Options" for your PC can be found in control panel from your windows start button.

Select the plan 'Balanced' and edit as shown in the image below. The computer monitor can consume a lot of power so we recommend that this turns off after 10 minutes.

