



Unclipping your SWS and finding your pin

Your SWS ID and pin number are located in two places:

- On the sticker that came with the SWS packaging.
- On a label inside the SWS housing.

To find the pin inside the housing, please do the following:

Remove all cables from the SWS.

Remove the top of the SWS by unclipping the two push in clips on the sides of the SWS.



Once the top is removed you will be able to see the inside.



To reassemble your SWS, push the two components back together gently. The clips on each side should reseal into the holes.