



1. Upgrading your Seneye Web Server's firmware

Before your Leak Detector can be connected to your SWS, the firmware needs to be upgraded in preparation. To do this, please send an email to support@seneye.com letting us know that you have a Leak Detector. Our support team will then upgrade the firmware. While your SWS is downloading the new firmware you will see the following light sequence:



Then, when your SWS is installing the update, you will see the following sequence:



And once the firmware has been installed, the lights will return to their stable sequence:



Once the lights are stable again, you can check that the firmware update has been successful by looking at the SWS's GUI, click 'Next' to find out how.

Next