



The warning lights on the front of the seneye alert you to when one of the parameters is out of range. We offer the facility to turn off the warning lights on the front of the seneye device if you want to.

If you are using the seneye device connected directly to the PC then please click [here](#) for instructions.

If you are using the seneye device with a SWS then please click [here](#) for instructions.