

When you first open your seneye.me dashboard you will be greeted with your Overview page.

By default this page will show you just the most important reading parameters from your **first** seneye USB device.

To view the rest of your reading parameters, such as O2 for a seneye Pond, or NH4 and PAR for a seneye Reef, just click on your device name at the top of the dashboard. This will take you to that device's dedicated page.



Your dashboard displays information in the form of customisable widgets.


Read more about your dashboard widgets and graphs [here](#).

Overview page

Your Overview page can be designed to help you get a quick snapshot of all your device environments.

By default, there is an Overview widget that displays the overall health of your **first** device's environment, a Last Readings widget giving you the latest snapshot of the important parameters, and separate widgets for pH, temperature and NH3.

Please contact us if you would like us to add these widgets for your **other** devices to your Overview page.

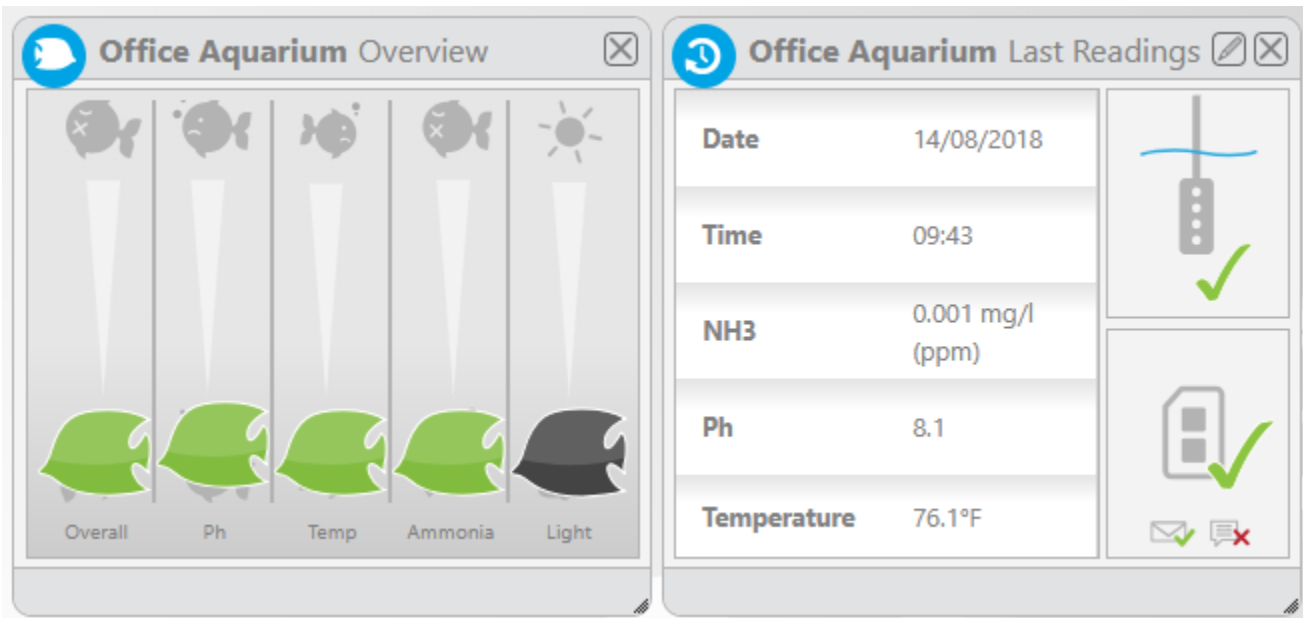

Device page

To view all of the reading parameters for a single device, click on the device name at the top of the page. This Device page displays additional widgets for the rest of your reading parameters.

Please contact us if you need help or would like us to modify your Overview page, or Device pages.